


+ The AMD Mop Frame and Handle

AMD Hardware

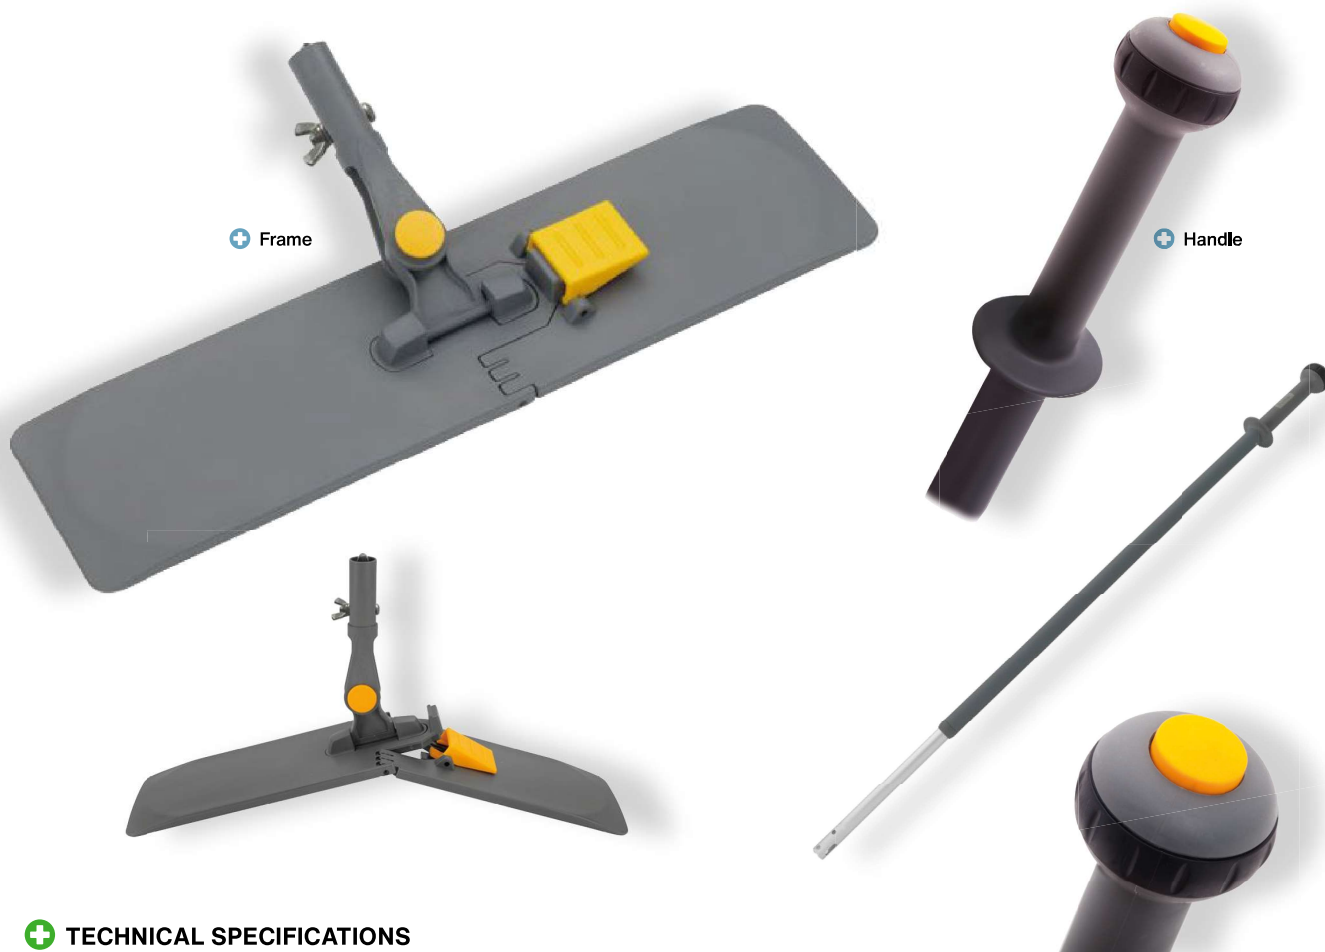

+ TECHNICAL SPECIFICATIONS

Item	W	L - Min	L - Max	D	Dia	H	Weight
Frame	388mm	-	-	100mm	-	153mm	310g
Handle	-	1240mm	1770mm	-	65mm	-	590g

+ ORDERING INFORMATION

Description	AMD Part No.
Frame & Handle	M01Z01K

+ PRODUCT INFORMATION

The mop handle and frame are lightweight and ergonomically designed for ease of use, the handle length can be adjusted at the touch of a button, length adjustment between 124cm and 170cm. The durable frame is easy to open with a foot or hand and allows the user to attach the mop to the frame without touching the mop itself.

The mop frame has a full range of movement and can be locked into place, via the touch of a button.

The handle is made from a combination of aluminium and plastic, the mop frame is made from an abrasion resistant plastic and the design allows for easy cleaning.

Aseptic Medical Devices

Newmarket Drive, Derby DE24 8SW | +44 (0) 1332 755622
sales@asepticmedical.com | www.asepticmedical.com

Aseptic Medical Devices is a trading name of Riverside Medical Packaging Company Limited